

1. 12.3-INCH DISPLAY OPERATION

1. 12.3-INCH DISPLAY-OVERVIEW

The 12.3-inch display has a display area which is 1.5 times wider than that of the 8-inch display.

FULL SCREEN DISPLAY

The initial screen and “Menu” screen fill the entirety of the display area.



SPLIT-SCREEN DISPLAY

Different information can be displayed on the left and right of the screen. For example, audio, air conditioning or consumption information screens can be displayed and operated while the map screen is being displayed.

The large screen on the left of the display is called the “Main Display”, and the small screen to the right is called the “Side Display”.



12.3-INCH DISPLAY OPERATION

This section describes only the characteristics of the 12.3-inch display, paying particular attention to the "Side Display". For details of the functions and operation of the "Main Display", refer to the respective section.

THE "Side Display"



The following functions can be displayed and operated on the "Side Display".

- ▶ Basic screens (See page 210.)
 - Audio
 - Air conditioning
 - Vehicle information
- ▶ Interrupt screens (See page 217.)
 - Intuitive parking assist
 - Phone
 - Destination Assist
 - Driving mode
 - Lexus night view

OPERATING CHARACTERISTICS OF THE SPLIT-SCREEN DISPLAY

When the split-screen is displayed, it is necessary to select the screen you wish to operate ("Main Display" or "Side Display").

■ SELECTING THE OPERATION SCREEN

- 1 When selecting the "Side Display", move the Remote Touch knob to the right until  is displayed at the boundary between the "Main Display" and the "Side Display", and then move it further to the right.
When selecting the "Main Display", move the Remote Touch knob to the left until  is displayed at the boundary between the "Main Display" and the "Side Display", and then move it further to the left.

1. 12.3-INCH DISPLAY OPERATION

2. BASIC SCREENS

The audio control screen, air conditioning control screen and vehicle information screen can each be displayed and operated on the “Side Display”.



SWITCHING THE BASIC SCREEN

- 1 Select the desired tab.

Screen button	Function
	To display the audio control screen
	To display the air conditioning control screen
	To display the vehicle information screen

TO DISPLAY ON THE “Main Display”

Detailed information that is not shown on the “Side Display” can be set to display on the “Main Display”.
For “Main Display” operation, refer to the respective section.

- 1 Select , or .

Bluetooth® CONNECTION STATUS

You can check such indicators as signal strength and connection status on the top right of the screen. For details, refer to “Owner’s Manual”.

AUDIO/VIDEO SYSTEM

Operations such as selecting a preset station or track are carried out on the screen.



INFORMATION



and is not display in some audio modes.

**CHANGING THE AUDIO
MODE**

- 1 Select  or  for select the desired audio mode.



**SELECTING A RADIO
STATION**

Stations that have been registered to the preset buttons can be selected.

- 1 Select  or  for select the desired station.

**SELECTING A TRACK/FILE OR
CHAPTER**


A track, file or chapter can be selected during playback in each mode.

- 1 Select  or  for select the desired track, file or chapter.


AIR CONDITIONING SYSTEM

Operations such as changing the air outlets or fan speed are carried out on the screen.

► Without rear air conditioning system

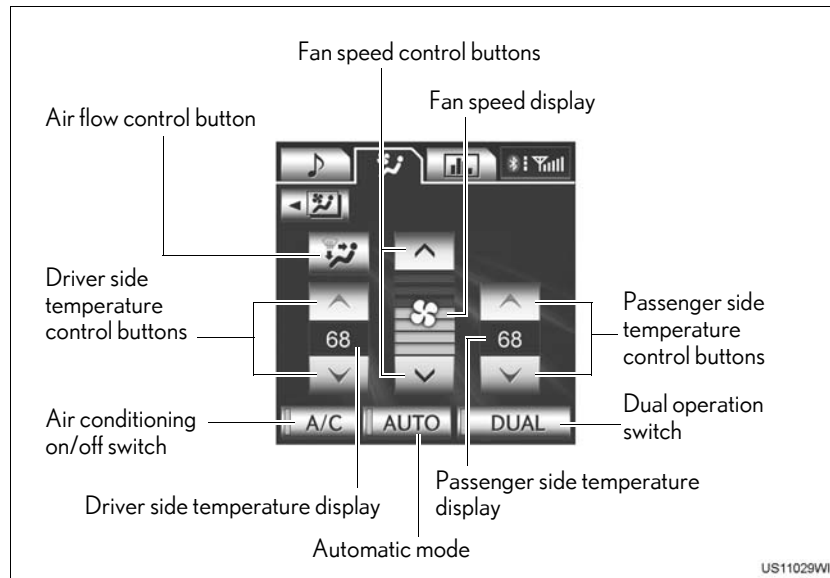

► With rear air conditioning system

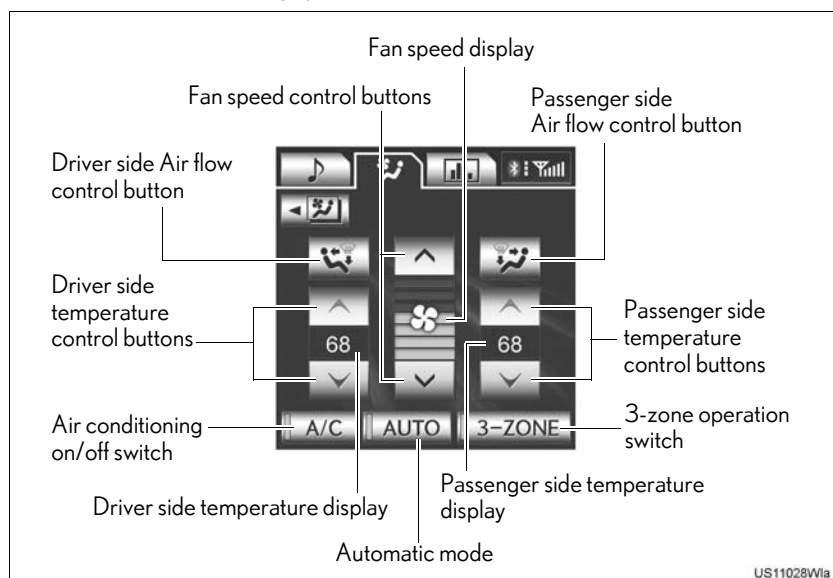

USING THE AUTOMATIC MODE

1 Select "AUTO".

- The air conditioning system begins to operate. Air outlets and fan speed are automatically adjusted according to the temperature setting.

2 Select to increase the temperature and to decrease the temperature on temperature control buttons.

- The temperature for the driver and passenger seats can be set separately.

ADJUSTING THE SETTINGS

■ ADJUSTING THE TEMPERATURE SETTINGS

► Without rear air conditioning system

1 Select to increase the temperature and to decrease the temperature on temperature control buttons.

- "DUAL" is used to set the temperatures independently for the driver's seat and front passenger seat. The air conditioning system switches between dual and simultaneous modes each time "DUAL" is selected. When the "DUAL" indicator is on, the temperature for the driver's seat and front passenger seat can be adjusted separately.

► With rear air conditioning system

1 Select to increase the temperature and to decrease the temperature on temperature control buttons.

- "3-ZONE" is used to set the temperatures independently for the driver's, front passenger's and rear seats. The air conditioning system switches between individual and simultaneous modes each time "3-ZONE" is selected. When the "3-ZONE" indicator is on, the temperature for the driver's, front passenger's and rear seats can be adjusted separately.

■ ADJUSTING THE FAN SPEED

1 Select to increase the fan speed and select to decrease the fan speed on fan speed control buttons.

■ CHANGING THE AIR OUTLETS

► Without rear air conditioning system

1 Select air flow control buttons.

- The air outlets used are switched each time the button is selected.

► With rear air conditioning system



1 Select air flow control buttons.

- Different air outlets for the left-hand and right-hand front seats can be chosen.
- The air outlets used are switched each time the button is selected.

VEHICLE INFORMATION

Vehicle information (the fuel consumption, compass, energy monitor etc.) can be displayed.
The details of the information, refer to "Owner's Manual".

SWITCHING THE VEHICLE INFORMATION

- 1 Select  or  for select the desired screen.

CONSUMPTION

Displays the average fuel consumption and regenerated energy (vehicles with hybrid system) for the past 10 minutes in 1 minute intervals, as well as the cruising range.



PAST RECORD

Displays the average fuel consumption and highest fuel consumption.



TRIP INFORMATION

Displays the cruising range, average fuel consumption and the amount of time elapsed since the engine <hybrid system> was started.



1.12.3-INCH DISPLAY OPERATION

■ COMPASS

Displays a compass and information about the current position. The orientation of the compass can be changed from north-up to heading-up by selecting the orientation symbol.

1 Select  or .

► North-up screen



► Heading-up screen



■ ENERGY MONITOR (VEHICLES WITH HYBRID SYSTEM)

Displays the hybrid system operation and energy recovery states.



1. 12.3-INCH DISPLAY OPERATION

3. INTERRUPTION SCREENS

Each of the following screens is displayed automatically in accordance with conditions.

- Intuitive parking assist
- Phone (See page 217.)
- Destination Assist (See page 197.)
- Driving mode
- Lexus night view

For the "Intuitive parking assist", "Driving mode" and "Lexus night view", refer to "Owner's Manual".

SWITCHING THE INTERRUPTION SCREEN

When multiple interruption screens have been opened, the hidden screens can be brought forward and displayed once again. (The driving mode screen cannot be displayed again.)

For example, when the Intuitive parking assist is being displayed.



- 1 Select the button for the screen you want to display at the front.

Screen button	Function
	To display the Lexus night view screen
	To display the intuitive parking assist screen
	To display the phone screen
	To display the Destination Assist screen

HANDS-FREE SYSTEM (FOR CELLULAR PHONE)

A calling screen will be shown on the "Side Display" when the following operations are carried out on the "Main Display".

- When on the phone screen is selected
- When the desired number is selected on the "Speed Dial" screen.
- When on the mail screen is selected



7

12.3-INCH DISPLAY


1.12.3-INCH DISPLAY OPERATION

RECEIVING A CALL

When a call is received, this screen is displayed with a sound.

- 1 Select  to talk on the phone.



To refuse to receive the call: Select .

To adjust the volume of a received call: Select “-” or “+”.

INFORMATION


- The incoming call screen can also be set to display on the “Main Display” when a call is received. (For details, refer to “Owner’s Manual”.)

SPEAKING ON THE PHONE

While talking on the phone, this screen is displayed. The operations outlined below can be performed on this screen.



To adjust the volume of the other party’s voice: Select “-” or “+”.

To hang up the phone: Select .

To mute your voice: Select “Mute”.

To transfer the call: Select “**Handset Mode**” to change from hands-free call to cellular phone call.

Select “**Handsfree Mode**” to change from cellular phone call to hands-free call.

DISPLAYING ON THE “Main Display”

The screen can be shown on the “Main Display” when carrying out an operation that cannot be conducted on the “Side Display”.

- 1 Select .

(INFORMATION)

- Operation is still possible using the steering phone switches even if the phone screen is hidden behind another interruption screen. If the operation is conducted using a steering switch, the phone screen will automatically be brought to the front. For details on operating the steering phone switches and the “Main Display”, refer to “Owner’s Manual”.

1.12.3-INCH DISPLAY OPERATION